



# CLOCK SPRING®

## Leak Repair System

*The Fast, Economical Solution for Low Pressure Pipeline Repair*




Leaks prior to repair application.



Wooden plugs used to stem flow – pipe cleaned prior to application of leak-sealing compound.



Metal-plastic compound applied and clamped in place with metal plate.

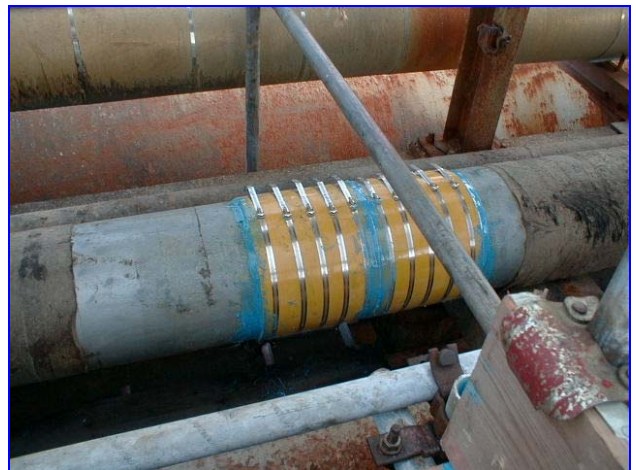

Snap Wrap sleeves applied and tightened with straps until fully cured (typically 2 – 3 hours).

**FOR FURTHER INFORMATION ON CLOCK SPRING® REPAIR SOLUTIONS CONTACT:**

**Clock Spring Company, L.P.**

**14107 Interdrive West, Houston, TX 77032**

**Telephone: 281-590-8491 • Facsimile: 281-590-9528**

**Email: [sales@clockspring.com](mailto:sales@clockspring.com)**